


MPK-F40/F340

SERVICE MANUAL

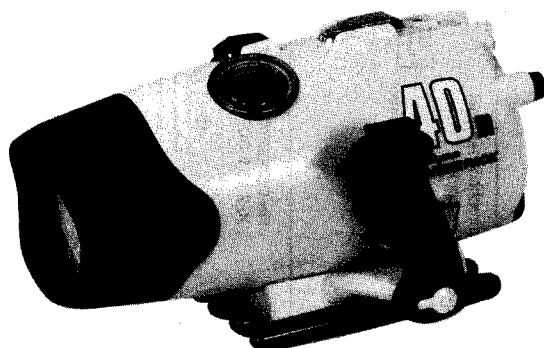



US Model
Canadian Model
 MPK-F40
AEP Model
UK Model
E Model
Australian Model
 MPK-F340

Handycam

SPECIFICATIONS

Material Plastic (ABS and PC), glass
Waterproofing O-ring, 3 buckles
Usable depth Up to 40 meters (132 feet)
Power sources One battery pack NP-77 or NP-55
Underwater microphone Piezoelectric microphone
Controllable function Power on/off, recording start/stop
Dimensions Unit: mm (inch)

Weight Approx. 12 kg (26 lb 7 oz)
Accessories supplied
 Pedestal for CCD-F40/CCD-F340E (1)
 Pedestal for CCD-SP7/CCD-SP5E (1)
 Pedestal for CCD-V9/CCD-V90E (1)
 Remote control connecting cord with stereo mini-mini plug (1)
 Remote control connecting cord with 5-pin plug (1)
 Wide conversion lens (1)
 Sports finder (1)
 Cushion (for CCD-V9/CCD-V90E) (1)
 Spare O-ring (1)
 Spare waterproof gasket (1)
 Grease (1)

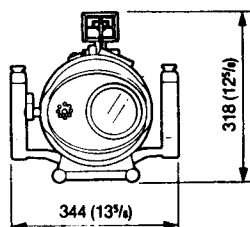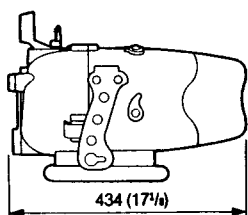

Features

This marine pack allows an 8 mm video camera recorder listed below to be used under water.

Countries	Compatible models
U.S.A. and Canada	CCD-F40, CCD-V9, CCD-SP7
Others countries	CCD-F340E, CCD-V90E, CCD-SP5E CCD-F340, CCD-SP5

- Usable at a depth as deep as 40 meters (132 feet)
- One-hand operation under water. Once the focus and white balance are set on land, power on/off and recording start/stop are the only operations to be done under water.



HANDYCAM MARINE PACK
SONY®


SECTION 1 GENERAL

This section is extracted from instruction manual.


Components of the Marine Pack

For further details, refer to the page numbers next to each item.

Front body

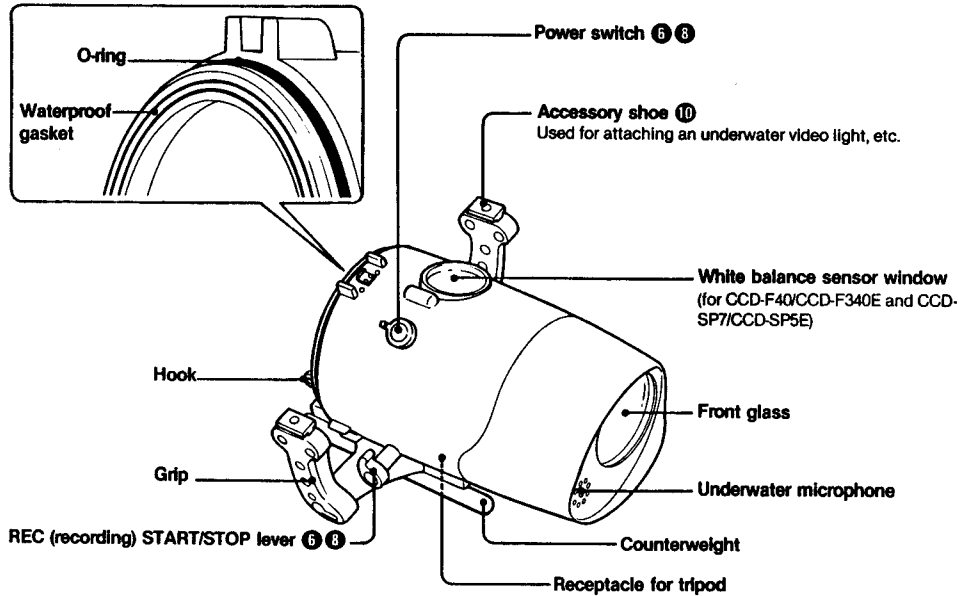


Rear body

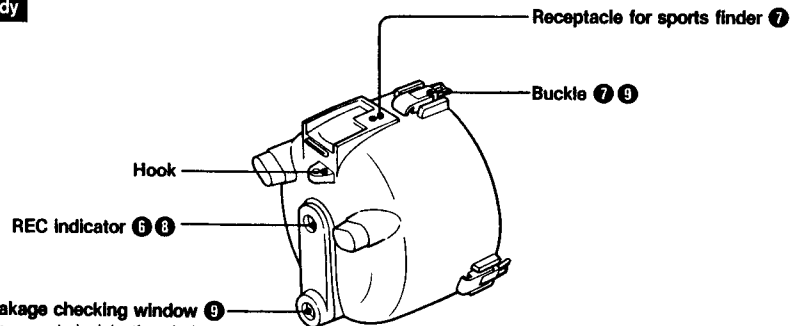

Water leakage checking window (9)
If water happens to leak in, the window turns red and the "!" indication appears in the window.

Components of the Marine Pack

Camera mount

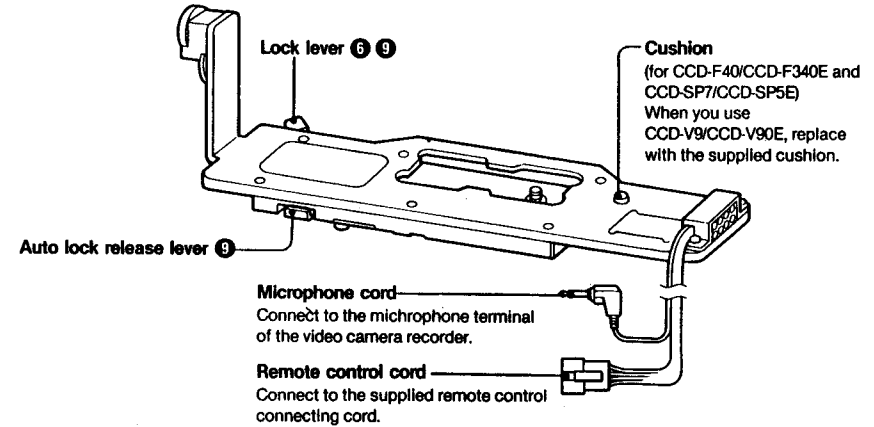

Accessories supplied


Pedestal	For CCD-F40/CCD-F340E X-2181-606-1	For CCD-SP7/CCD-SP5E X-2181-607-01	For CCD-V9/CCD-V90E X-2181-608-1
Remote control connecting cord	For CCD-F40/CCD-F340E and CCD-SP7/CCD-SP5E 1-574-256-11	Stereo mini-mini plug	For CCD-V9/CCD-V90E 1-574-255-11
Wide conversion lens (magnifying power: × 0.6) 2-181-669-01	Sports finder X-2181-605-1	Cushion (for CCD-V9/CCD-V90E) 2-181-680-01 (CCD-F40, F340, SP5, SP7) 2-181-680-11 (CCD-V9, V90)	
Spare O-ring (black) 2-181-670-01	Spare waterproof gasket (white) 2-181-617-01	Grease 2-115-921-01	

Preparation before recording

1 Install the video camera recorder on the camera mount.


1 Install an NP-77 (or NP-55) battery pack (optional) to the video camera recorder. (Refer to the instruction manual of the video camera recorder.)

2 Install the specific pedestal on the video camera recorder.

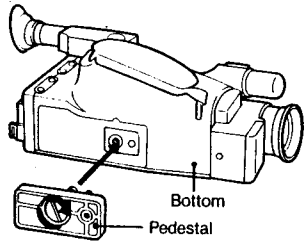

Turn the screw with a coin, etc.

3 Install the video camera recorder on the camera mount.

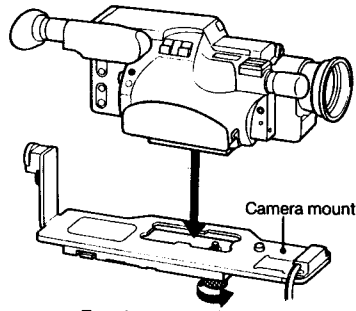


Turn the screw with a coin, etc.


When you use a CCD-V9/CCD-V90E video camera recorder
Remove the lens cover before installing the video camera recorder on the camera mount.

4 Remove the lens hood of the video camera recorder and install the wide conversion lens.

- Remove a lens cap from the video camera recorder.
- Remove a filter, such as a protector, if it is in use.
- By installing the wide conversion lens, the shooting coverage becomes wider, although the subject is shot smaller at 60 percent.

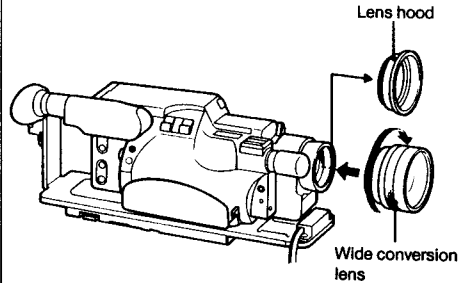


5 Connect both microphone and remote control cords to the video camera recorder.

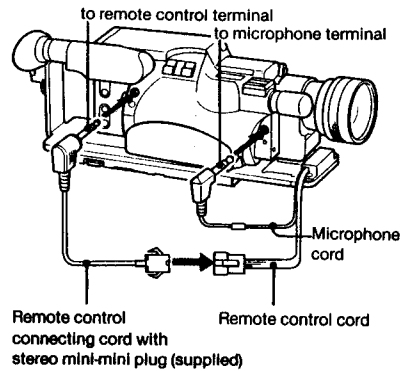

When you use CCD-V9/CCD-V90E video camera recorder
Use the remote control connecting cord with a 5-pin plug.

2 Preset the video camera recorder.

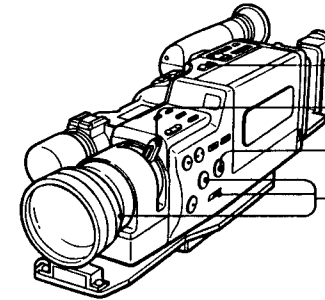

Set power switch to CAMERA.

Set zoom lever to WIDE.

Set shutter speed at 1/60 seconds (normal speed).

1 Set the AUTO LOCK switch to RELEASE, and press the FOCUS button (manual focus mode).
2 Set focus ring at ∞.

When you use CCD-V9/CCD-V90E video camera recorder


	White balance
Normally	OUTDOOR
Night diving	INDOOR

3 Install the video camera recorder in the front body.

The transport cover should be removed.


1 Insert the video camera recorder along the rail until it clicks.

2 Push the lock lever in the direction of the arrow.

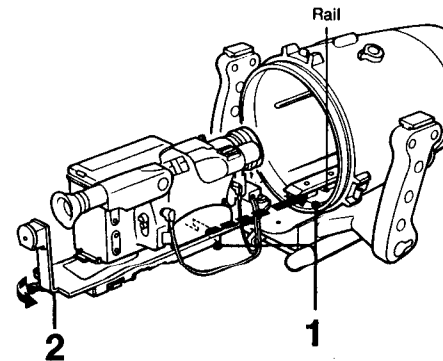


3 Press up the STANDBY switch of the video camera recorder.

4 Make sure that the REC indicator lights up when the power switch of the marine pack is set to ON and the REC START/STOP lever is pressed in the direction of the arrow.

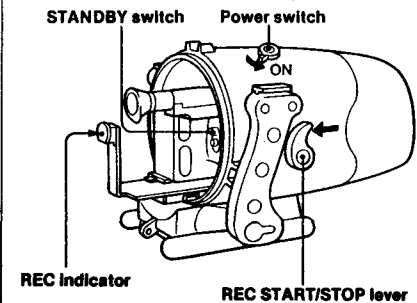


4 Joint the front and rear bodies.

- 1** Check that the O-ring and waterproof gasket are all right, and grease them lightly. (See page 11.)

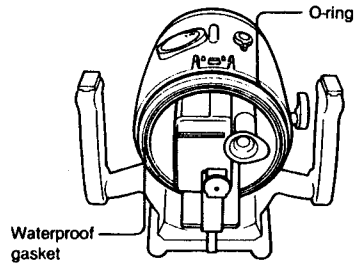


- 2** Press down the front body and fasten the three buckles securely.

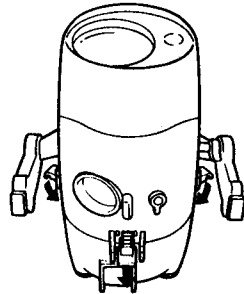

5 Attach the sports finder.

The sports finder allows you to estimate the approximate shooting coverage. (See page 8.) Turn the screw on the sports finder to secure it to the marine pack body.

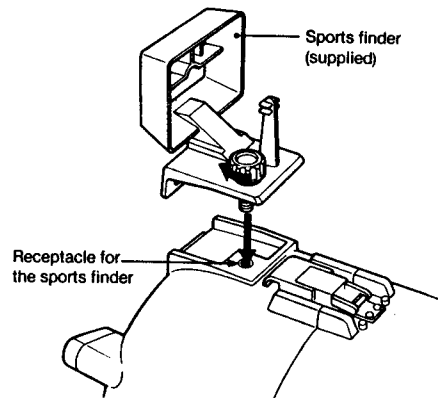


The marine pack is now ready for recording.

Operation


Starting/Stopping Recording

- 1** Set the power switch to ON.
2 Press the REC START/STOP lever momentarily toward you. To stop recording, press the REC START/STOP lever again. The recorder will enter standby mode.

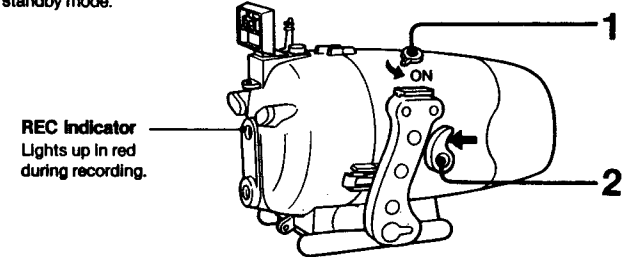


Note If you do not record for a long period of time, set the power switch to OFF.

Using the Sports Finder

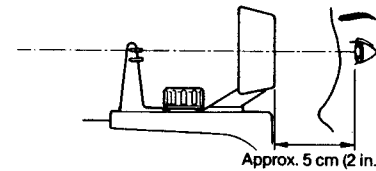


When the wide-conversion lens is removed
The scene within the inner frame on the sports finder will be shot.

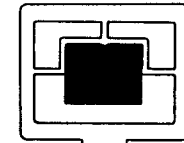


The scene within the finder frame will be shot. Observe the subject through the sports finder and align the horizontal bar at the center of the finder with the upper or lower horizontal bar on the sight.

For shooting distance of more than 5 m (16 feet)

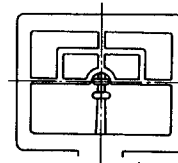

Align with the upper bar of the sight.

For shooting distance of approx. 1 to 2 m (3 to 7 feet)

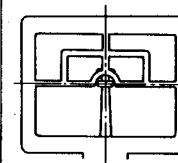


Align with the lower bar of the sight.

For shooting distance of 2 to 5 m (7 to 16 feet), set the center bar of the finder between the upper and lower bars on the sight.

Checking Water Leakage

If water happens to leak in, the water leakage checking window turns red and the "!" indication appears in the window. (The window will return to white as it gets dry. To dry it faster, wipe water drops with tissue paper or cloth.)

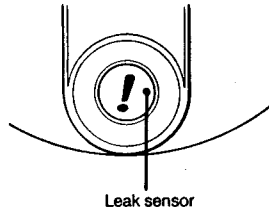


In such a case, remove the marine pack from the water as soon as possible, keeping it horizontal. Be sure to follow the safety rules for diving. Check the cause of the leakage. If the video camera recorder gets wet, take it to the nearest Sony service facility immediately.


Removing the Video Camera Recorder

- 1 Open the marine pack.**
Before unfastening the buckles, wash the marine pack with fresh water and dry it with a soft cloth. (See page 10.)

- 1 Unfasten the three buckles.**

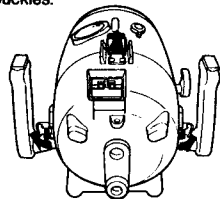


- 2 Set the end of a buckle to the rear of the catch and press the buckle plate in the direction of the arrow.**

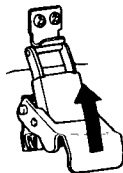

- 2 Remove the video camera recorder from the front body.**

- 1** Unlock the camera mount by pressing the lock lever in the direction of the arrow.
2 While pressing the auto lock release lever, pull the video camera recorder out of the front body.

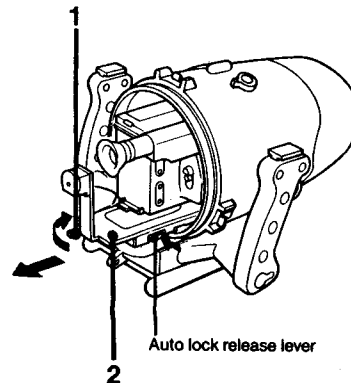

Hints on Underwater Recording

Recording under water is different from recording on land because it is affected by the clarity and depth of the water, light input and objects around the subject. The following are hints for good recording under water.

Color under Water

Water absorbs light, especially red light so that subjects in deep water are seen as bluish. The color is also affected by the clearness of the water.

Best Time for Recording

The best recording time is from 10 a.m. to 2 p.m. When the sun is high in the sky, optimum results can be obtained. To record at night, use powerful light.

Subject Size under Water


Since the refractive index under water is higher than that in air, an object is visible by 1/4 more closely, and therefore larger, under water than in air. This phenomenon affects the lens on the video camera recorder as well as the human eye. It means that a lens with a wide angle of field is effective under water. This is why a wide-conversion lens is supplied with the marine pack.

Camera Work in Slow and Stable Motion

When recording, keep your body stable. An unstable shot will be magnified on the TV screen. Move the video camera recorder as slowly as possible. A subject such as a fish moves itself and enables you to make an attractive program without moving the recorder.

Underwater Video Light

In a deep place or under rocks where direct sunlight does not reach, recording with artificial lights is recommended. Attach the Sony HVL-80D underwater video light or equivalent to the right or left accessory shoe on the marine pack.

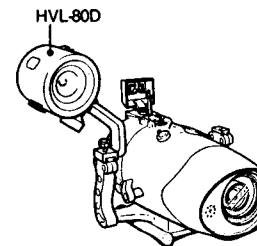

Maintenance

After recording

After recording in the sea, submerge the marine pack with the buckles fastened thoroughly in fresh water for a while so that the sea water is removed. Then wash it with fresh water and dry it with a soft cloth. Clean the video camera recorder and the inside of the pack with a dry soft cloth.

Do not use any type of solvent, such as alcohol or benzine for cleaning, as this might damage the finish. Be sure to perform the above procedure every time the marine pack is used in the sea.

If the sea water remains on the marine pack, the metal parts may get rusty or the operation lever becomes hard to move.


When storing the marine pack

Grease the O-ring and waterproof gasket, put them in the grooves correctly and put the transport cover. Close the pack without fastening the buckles and place it in a cool place.

Avoid storing the marine pack in a hot or very cold place, in a place subject to direct sunlight or excessive dust, or together with naphthalene or camphor. This will damage the marine pack.

Notes on the O-ring and Waterproof Gasket


The O-ring and waterproof gasket assure the waterproof function of the marine pack. To maintain waterproof integrity, use them correctly. Incorrect operation may cause water to leak in.

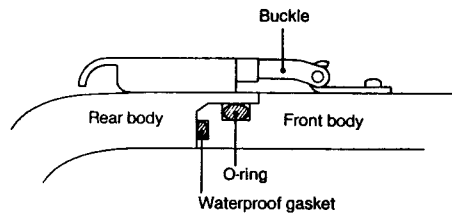

Check that there are no scratches or cracks.


Scratches or cracks on the O-ring or waterproof gasket may cause water to leak in. If there are any, replace the damaged O-ring or gasket with a new one.

Do not remove the O-ring or gasket from the groove with a metal tool or a tool with a sharp point.

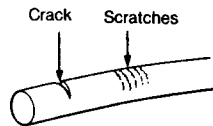

Remove any dust, sand or hair from the waterproof gasket.

Check there is no dust, sand or hair on the O-ring or waterproof gasket, or in the groove or on the surface where it touches. If there is, remove them completely, or the O-ring or gasket and the surface of the marine pack body may be damaged and water may leak in.

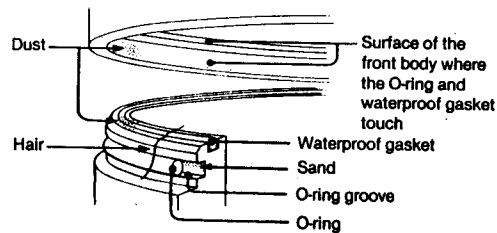


Grease the O-ring and waterproof gasket.

The grease protects the O-ring and gasket from wear. After checking that there are no cracks or dust on the O-ring and gasket, grease them using a finger. During greasing, recheck that there are no cracks or dust. Never use cloth or paper for greasing because the fibers may cling.

Do not twist the O-ring and waterproof gasket.

Put the O-ring and gasket in the grooves evenly. Never twist them.



Do not trap the O-ring and waterproof gasket with the marine pack.

When jointing the marine pack, be careful not to trap the O-ring or gasket between the front and rear bodies. If this happens, not only will the O-ring or gasket be damaged, but also water may leak in.

Storage

Store the supplied spare O-ring and waterproof gasket in a cool place, packed in the original carton. Be sure to avoid the following:

- Exposing to direct sunlight.
- Placing a heavy object on the O-ring or gasket.
- Folding the O-ring or gasket.

Useful life of the O-ring and waterproof gasket

It depends upon the maintenance and the length of use, but we recommend changing it every one or two years. Use ACC-804 marine pack maintenance kit (optional) to replace.

Precautions

On video camera recorder

Be careful not to expose the equipment to salty air nor to drip sea water on the equipment.

- Avoid opening the marine pack on the sea or at the seaside. Preparations such as installing and checking the equipment should be made in a place with low humidity and no salty air.
- When a video camera recorder and a monitor TV are to be used on the sea or at the seaside for a long period of time, we recommend that they are checked periodically by a Sony service facility.
- If the equipment becomes wet, take it immediately to the nearest Sony service facility for preventive maintenance.

On the marine pack

- If the marine pack is put in the water after being opened and jointed in a place with high temperature and high humidity, moisture condensation may occur, causing the glass to fog up and perhaps damaging the equipment.
- The waterproof integrity of the marine pack is maintained by the O-ring and waterproof gasket, and the grooves and surfaces where they touch. Be especially careful not to damage or deform those areas.
- Before jointing the marine pack, check these areas to see that there are no cracks, dust, sand, hair, etc., and that the O-ring and waterproof gasket are lightly greased.
- Do not leave the marine pack under direct sunlight for a long period of time, otherwise the temperature in the pack may rise and the equipment in the pack may be damaged.
- If you cannot avoid leaving the marine pack under direct sunlight, be sure to cover the pack with a towel or other protection.
- Do not throw the marine pack into the water, lower it gently into the water.

On recording under water

- We recommend you to check before diving that the equipment operates correctly and there is no water leakage at a depth of about one meter (3 feet).
- Be sure to follow the safety rules for diving such as diving period, depth, etc.

When opening the marine pack

To prevent the video camera recorder from getting wet, take care on the following points.

- Dry the marine pack well.
- Soak up any water between the front and rear bodies with a towel.
- Make sure you are dry. Take care that no water drops from your wet suit.

On transportation

- To transport the marine pack for a long distance, remove the video camera recorder or it may be damaged.
- To transport the marine pack by air or by car, remove the video camera recorder from the pack and repack the marine pack in the original shipping carton with the associated packing material.
- To move the marine pack by car with the video camera recorder in position, use cushioning so that shocks or vibration are avoided as much as possible. Be sure to secure the pack firmly so it will not turn over.

Sony does not accept liability for damage to the video camera recorder, battery, etc. in the marine pack and for the cost of recording if water leakage occurs caused by incorrect operation.

1. Concerning Defects

Marine Pack defects are classified as the three following types.

1) Operational defects

This type mainly involves malfunctions caused by electrical circuit or parts defects. Repair is the same as for normal products.

2) Damaged and missing parts

Waterproofing is sometimes affected by the locations of defects and symptoms. Before making repairs, always use the check list to check the type of defect.

Note: Refer to pages 9 and 10 for the check list.

3) Water leaks

After the discovery of a defect or after making repairs, it is necessary to perform either a hydraulic pressure test or simple water leak test using a water tank.

2. Concerning Water Leaks

To ensure waterproofing, O-rings are used in the holes in the Marine Pack housing for openings, shafts, display windows and the front glass. Water leaks are possible in any of these locations but the conditions under which water leaks occur differ for the openings and the other parts.

1) Water leaks at openings

Openings are waterproofed using O-rings compressed by the force of the buckle spring.

Near the surface of the water, where little water pressure is applied to Marine Pack, the force of the buckle alone provides sufficient waterproofing. As the water pressure applied to Marine Pack increases at greater depths, however, the force applied to the O-rings increases due to the water pressure to increase the waterproofing.

Because of this, due to the type of waterproofing construction used, opening water leaks are more prone to occur in shallow water (approx. 2 meters) than in deep water.

Also, since there is a gap between the front and rear housings, sand and dirt tend to enter and adhere to the O-ring in shallow water. When the cover is opened, this sand and dirt can then enter under the O-ring and cause a water leak the next time Marine Pack is used.

This, most water leaks in the openings are the result of adhered dirt, sand, hair and other foreign matter as well as O-ring and housing damage due to careless handling.

2) Water leaks at other openings

Parts where there are holes in the housing (shafts, display window, front and rear glass) are constructed with O-rings mechanically compressed by screws and nuts.

Due to the construction, these places cannot be reached with the hands: therefore, the waterproofing is more secure than that of the openings.

The causes of water leaks are damage of the parts compressing the O-rings, loosening of the screws and nuts fastening the parts and improper reassembly.

3. Water Leak Check Methods

After the discovery and repair of a water leak, it is necessary to perform a hydraulic pressure test and water leak test using a water tank.


1) Opening water leak check method

As was mentioned above, due to the construction, water leaks in openings are more prone to occur in shallow water than in deep water. Consequently, a simple water leak test using a water tank is sufficient in many cases, without performing a hydraulic pressure test.

*Water leak test

In this method, Marine Pack immersed in a tank filled with water and checked for water leaks.

Marine Pack should be left immersed in the water tank (or bathtub, swimming pool, etc.) for at least 15-20 minutes with the covers closed. The water depth should be at least 1 meter.

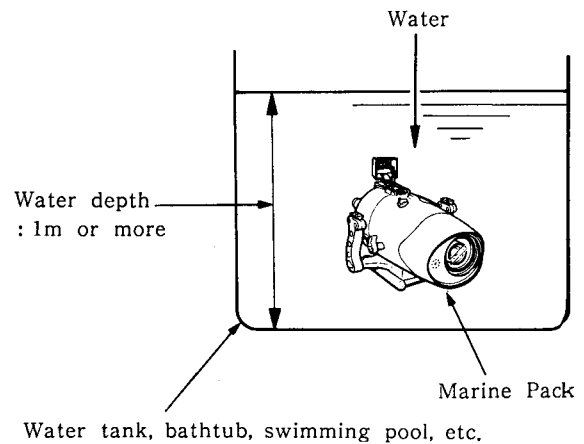


2) Water leak check methods for other waterproofed locations.

In addition to water leaks caused by damaged parts and loose screws, there are also water leaks at other waterproofed locations which cannot be detected with a water leak test: therefore, the hydraulic pressure test must be used.

**Hydraulic pressure test

In this test, Marine Pack is immersed in a water tank called a hydraulic pressure vessel, pressure is applied using compressed air and checks are made for water leaks and the ability to withstand water pressure is tested.

Extreme pressure is applied to Marine Pack underwater. Water leaks may occur when this pressure is first applied. In such cases, the water leak check must be made using the hydraulic pressure test with a hydraulic pressure vessel.

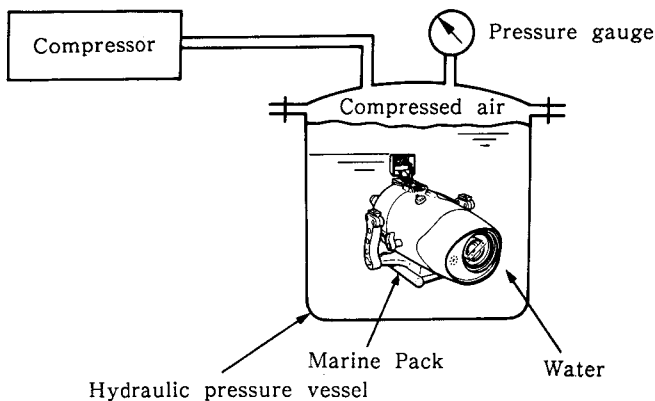

4. Causes of Water Leaks (excluding parts damage)

• Water leaks in openings

- 1) When the covers have been closed with sand, dirt and hair adhered to the O-rings, O-ring grooves, housing O-ring contact surface or waterproof packing.
- 2) When the cover is closed with an O-ring out of its groove or a cord is caught in the cover.
- 3) When an O-ring is damaged or cracked (aging).
- 4) When there is a long scratch which crosses the housing O-ring contact surface.
- 5) When a cover is not tightly closed due to a defective buckle.

• Water leaks at other waterproofed locations

- 6) When there are scratches on the surfaces of the parts which compress the O-rings.
 - 7) When the Parts which compress are loose.
 - 8) When tightening with sand, dirt and hair adhered to an O-ring or part which compresses the O-ring.
 - 9) When an O-ring has not been installed.
- Causes 1)-5) and 9) above can be discovered relatively easily using the water leak test described above.

5. Water Leak Repair Methods

• Relatively light scratches on O-ring contact surfaces can often be repaired by polishing.

Caution should be exercised concerning the following points.

- 1) Only extremely light scratches can be repaired.
- 2) Use number 600-1000 waterproof sandpaper for repairs and apply water while polishing.
- 3) Polish the scratch area smoothly using care not to create local indentations.
- 4) Do not use putty to make repairs since such repairs will fail under water pressure.

• Checks and cautions


- 1) Make sure that there are no scratches on the housing O-ring contact surfaces.
- 2) Make sure that there are no scratches or cracks in the O-rings.
- 3) Always coat the O-rings with grease by hand and make sure that the O-rings are not twisted when installed.

SECTION 2
DIAGRAMS

PRINTED WIRING BOARD

SEMICONDUCTOR LOCATION

Ref.No.	Location
IC001	C-4
IC002	D-4
IC003	D-6
IC004	B-5
IC005	D-3
Q001	C-3
Q002	B-3
Q003	B-3
Q004	B-3
Q005	C-3
Q006	C-3
Q007	C-2
Q008	B-2
D001	B-5
D002	B-4
D003	B-3
D004	B-3
D005	D-5
D006	B-6
D007	B-7
D008	B-6
D009	B-3
D010	B-3
D011	C-2
D012	C-3
D013	C-2
D014	C-2

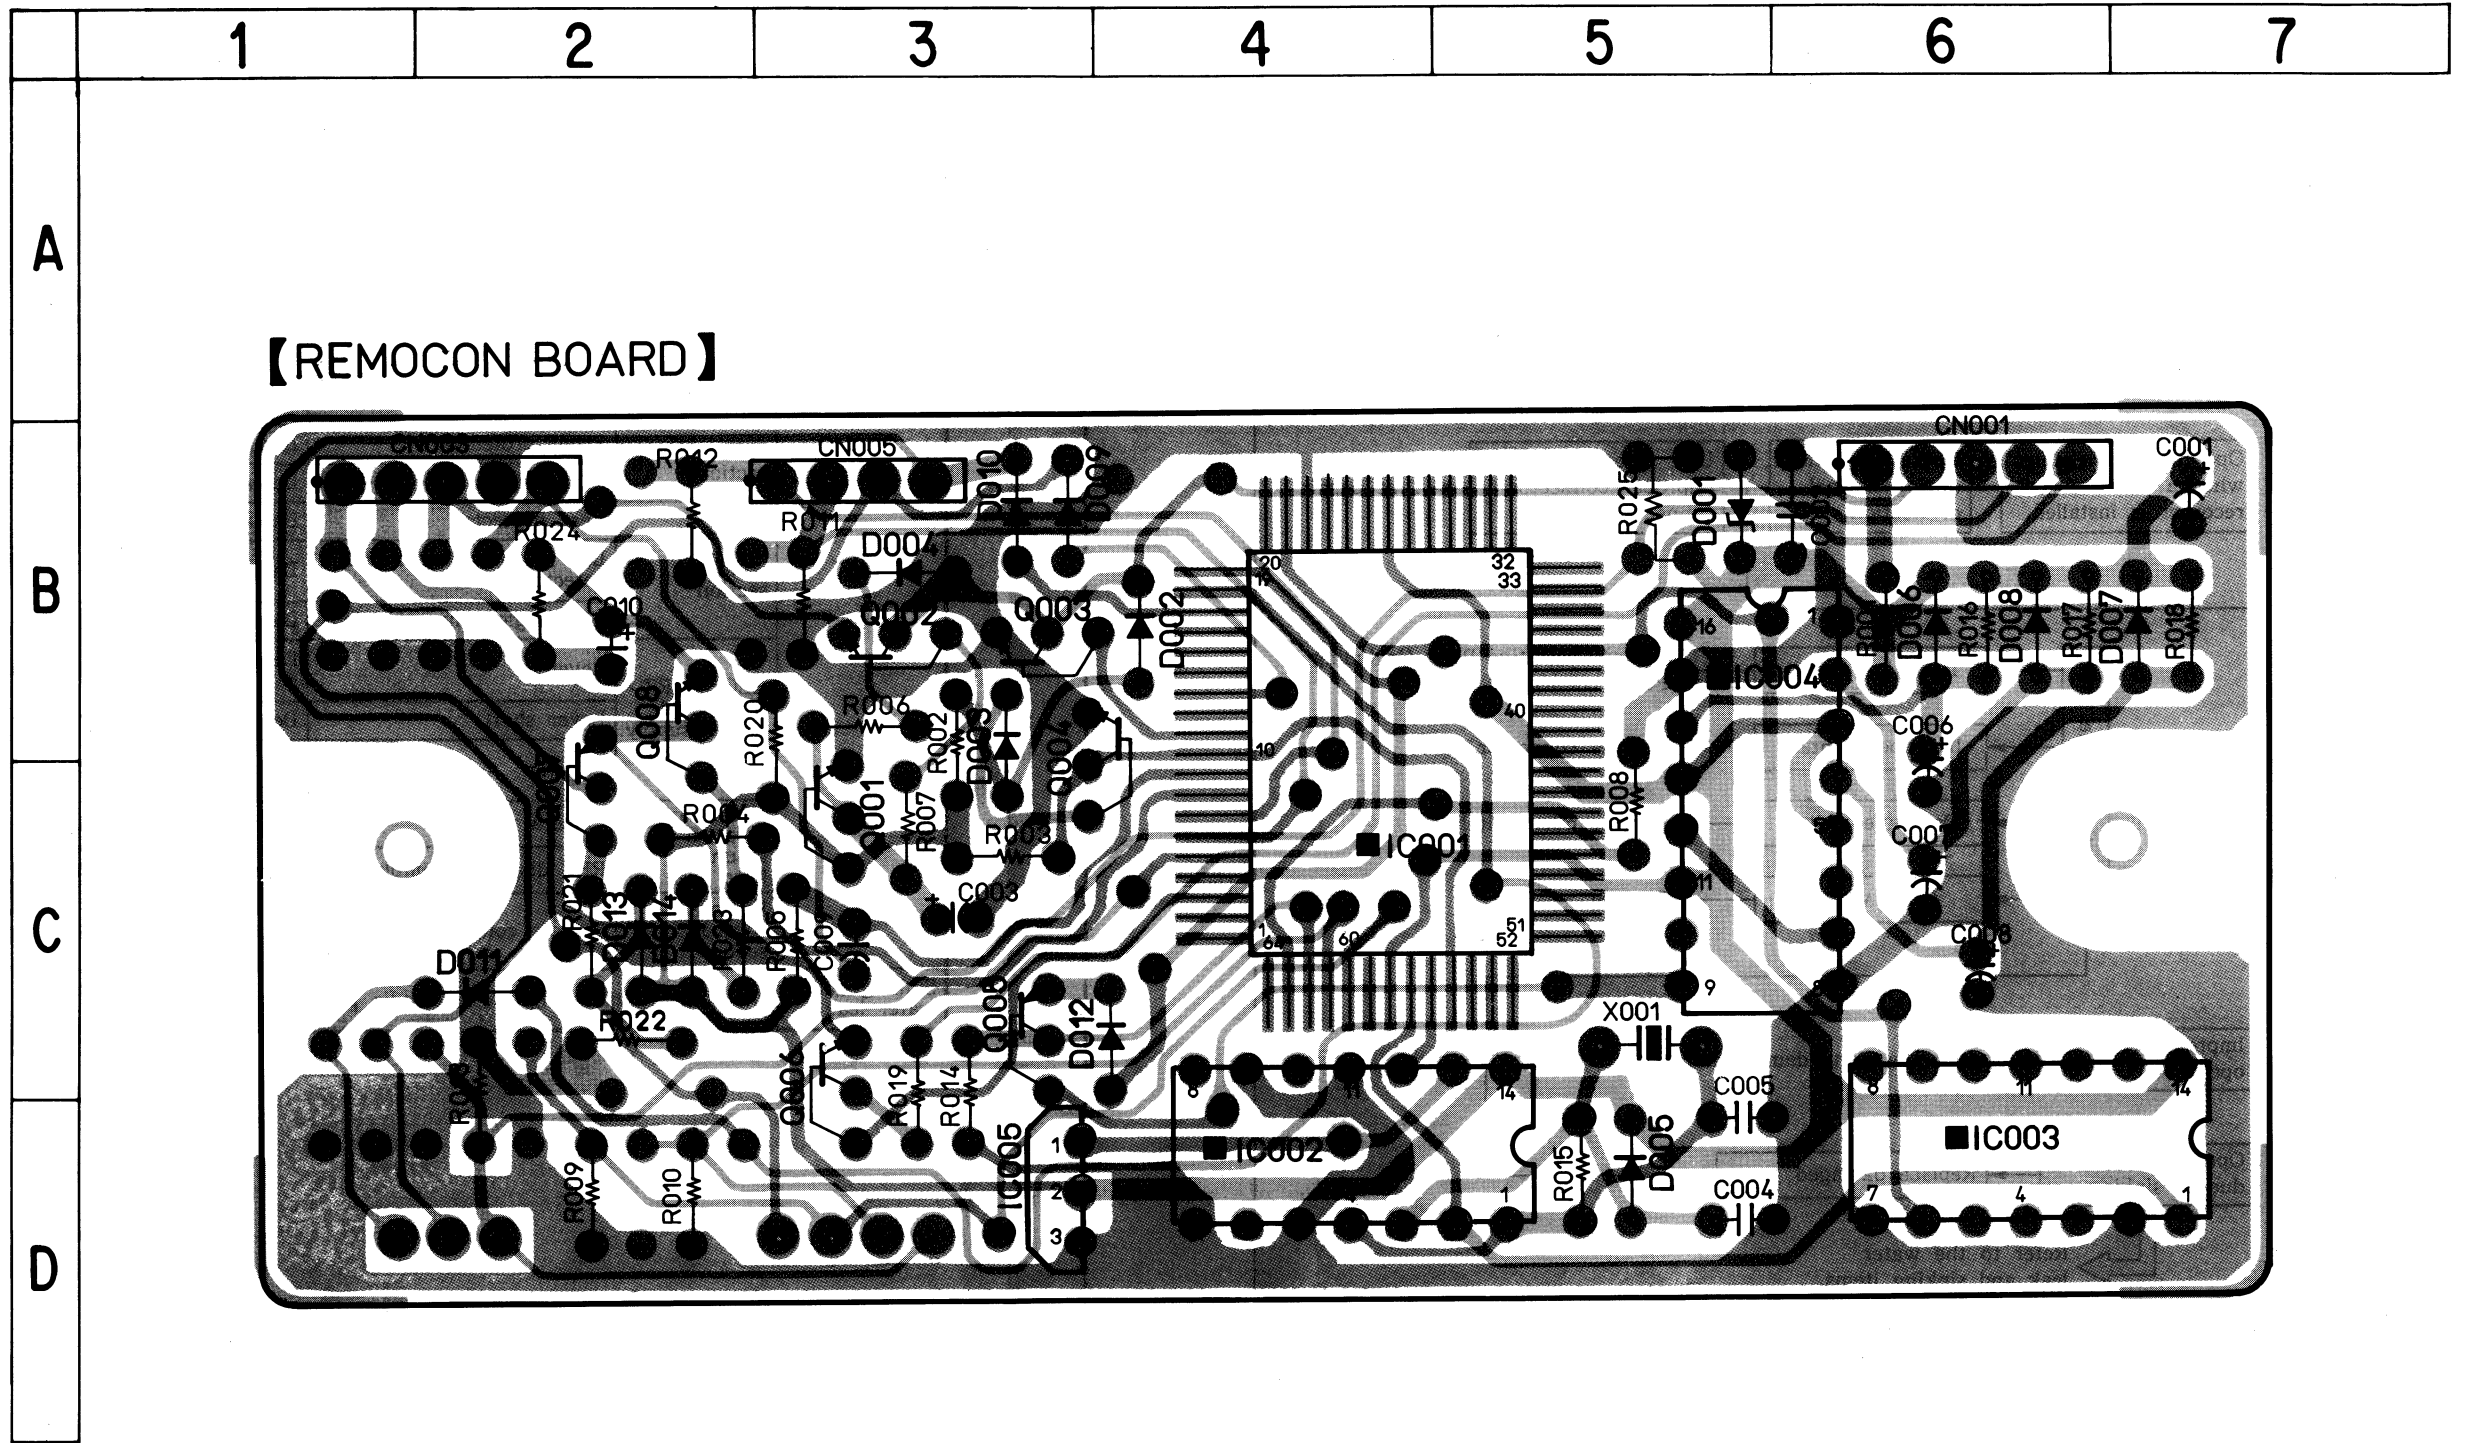

Semiconductors Lead Layout

Note:

- : parts extracted from the component side.
- : parts extracted from the conductor side.
- ⊗ : Through hole.
- ▨ : Pattern from the side which enables seeing.
- : Pattern of the rear side.
- : parts mounted on the conductor side.


2SA1115
DTA144ES
DTC144ES




2SC2785




S-8054ALB




TC4024BF
TC4069UBP

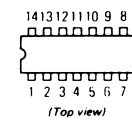


TC4539BF




μPD7503G

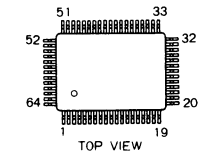

1SS119
RD5.1ES-B1



TLR123

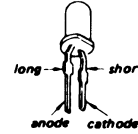

6. Repair Location and Hydraulic Pressure Test

When a defect is discovered or a repair is made at a location related to the waterproofness of Marine Pack, the hydraulic pressure test must be performed. Repairs at locations which require the hydraulic pressure test, and the hydraulic pressure test itself, are performed at the factory: therefore, always check the type of defect using the check list before making repairs.

Type of defect	Defect location and repair method	Hydraulic pressure test
Improper operation	<p>Operational symptoms when a video camera recorder is installed → Operational check during normal connection → Unit defect (including improper connector connections) → Unit repair</p>	Unnecessary
	<p>Defective Marine Pack → Defective circuit → Replace defective Parts (including PCBs, connectors, etc.)</p> <p>Defective Marine Pack → Improper contact → Replace connector</p> <p>Defective Marine Pack → Defective switch → Replace microswitch</p> <p>Defective Marine Pack → Open wiring → Replace</p>	
	<p>Improper lever operation → Refer to the parts damage item.</p> <p>Operational failure due to sinking → Replace damaged parts → Refer to the water leak and sinking items.</p>	


Type of defect	Defect location/symptom		Repair method	Hydraulic pressure test	
Parts damage	Housing related	Exterior part damage	Scratch	Replace part	Necessary
		Waterproofing O-ring	Light damage	Polish using waterproof sandpaper	Necessary
			Heavy damage	Replace part	
		O-ring	Scratch, aging	Replace part (life : 2 years)	Unnecessary
		Waterproofing packing	Scratch, aging	Replace part	Unnecessary
		Buckle (including mounting screw)	Damage or coming off	Replace part (repair housing when screws are affected)	Unnecessary
	Underwater microphone	Damage	Replace part	Necessary	
	Grip area	Deformation, damage	Light damage	Replace part	Unnecessary
			Heavy damage	Housing repair (overhaul mounting section)	Necessary
	Front glass section	Front protector	Damage, loss	Replace part	Unnecessary
		Front glass	Damage	Replace part	Necessary
	Display window section	Rear protector	Damage, loss	Replace part	Unnecessary
		LED window, water leak detector window	Damage	Replace part	Necessary
		Wide-angle conversion lens	Damage, loss	Replace part	Unnecessary
	REC START/STOP and power supply lever area	Lever	Damage or coming off	Replace part	Necessary
Lever shaft		Deformation	Replace part	Necessary	
Bearing		Deformation, scratch	Replace part	Necessary	
Video camera recorder mounting base area	Camera mount	Damage	Replace part	Unnecessary	
	REC display assembly	Damage	Replace part	Unnecessary	
Remote control section	Remote control case	Damage	Replace part	Unnecessary	
Sinking due to water leak	Determine cause using the hydraulic pressure test.		Repair the defect or replace the part.	Necessary	

SECTION 3 EXPLODED VIEWS

NOTE:


- The mechanical parts with no reference number in the exploded views are not supplied.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked "★" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- -XX, -X mean standardized parts, so they may have some differences from the original one.

(1)

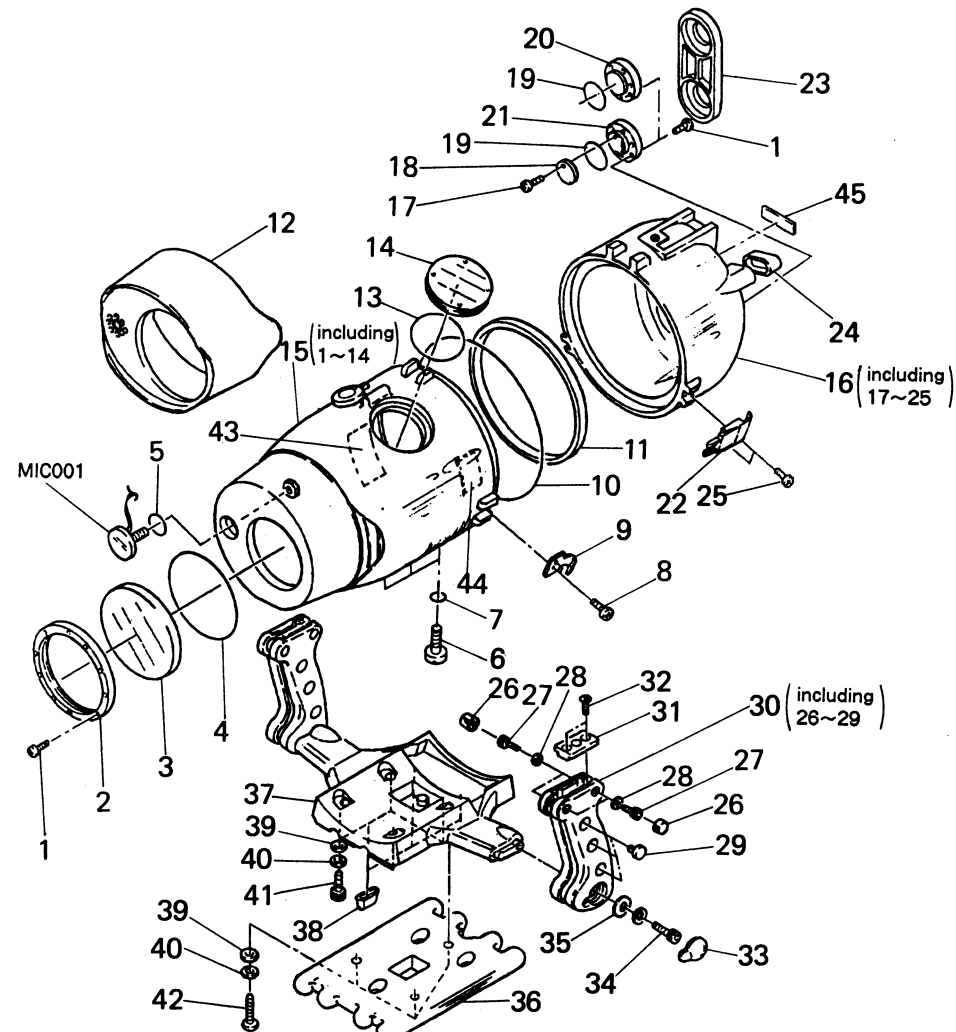

No.	Part No.	Description	Remark	No.	Part No.	Description	Remark
1	2-115-925-11	SCREW (2) (M2X10), TAPPING		24	2-181-631-01	FOOT, RUBBER	
2	2-181-642-01	RING, FRONT GLASS RETAINER		25	2-391-514-00	SCREW, + P 3.5	
3	2-181-618-01	GLASS, FRONT		26	2-115-916-01	COVER, INSERT FITTING SCREW	
4	2-181-670-11	RING, O		27	2-115-930-01	BOLT (M5X8), HEXAGON SOCKET	
5	2-181-670-61	RING, O		28	2-115-935-01	WASHER, W5	
6	2-181-607-01	SCREW, RAIL FITTING		29	2-115-915-01	COVER, GRIP ASSY SCREW	
7	2-181-670-41	RING, O		30	X-2115-903-1	GRIP ASSY	26-29
8	2-181-605-01	SCREW (M3.5X8)		31	2-115-923-01	SHOE, BRACKET	
9	2-115-906-01	RETAINER, BUCKLE		32	2-115-929-01	SCREW +K M5	
10	2-181-670-01	RING, O		33	2-115-914-01	COVER, GRIP FITTING SCREW	
11	2-181-617-01	PACKING, WATERPROOF		34	2-115-931-01	BOLT, HEXAGON SOCKET 97	
12	*2-181-652-01	PROTECTOR, FRONT		35	2-115-917-01	WASHER, GRIP FIXED	
13	2-181-670-21	RING, O		36	*2-181-682-01	WEIGHT (A)	
14	2-181-616-01	WINDOW, WHITE BALANCE		37	*2-181-654-01	BASE, GRIP	
15	*A-6767-856-A	HOUSING BLOCK ASSY, FRONT	1-14	38	2-181-635-01	COVER, GRIP BASE RUBBER	
16	*A-6767-860-A	HOUSING BLOCK ASSY, REAR	17-25	39	2-181-603-01	WASHER, W6	
17	2-115-925-01	SCREW (2) (M2X5), TAPPING		40	2-181-604-01	WASHER, SW6 SPRING	
18	*2-181-615-01	PLATE		41	2-181-602-01	BOLT, HEXAGON SOCKET	
19	2-181-670-51	RING, O		42	2-181-606-01	SCREW, TRUS	
20	2-181-614-01	WINDOW, LED		43	*2-181-664-01	LABEL, CAUTION	
21	2-181-638-01	WINDOW		44	*2-181-663-01	LABEL, MODEL NUMBER (E,AUS,AEP,UK Model)	
22	2-390-778-02	BUCKLE			2-181-686-01	LABEL, MODEL NUMBER (US,Canadian Model)	
23	2-181-639-01	PROTECTOR, REAR		45	*2-181-687-01	LABEL (A) (E,AUS,AEP,UK Model)	
				001	1-542-114-11	MICROPHONE, UNDERWATER	

(2)

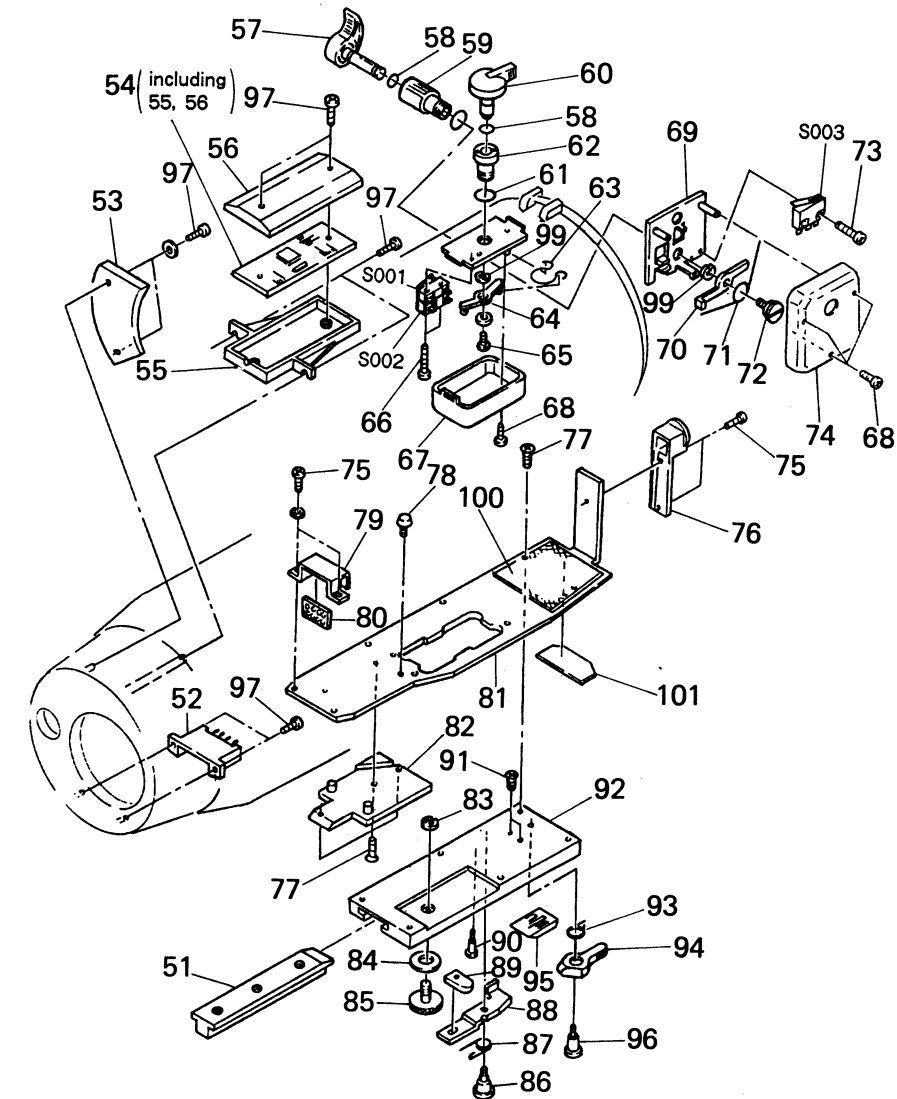

No.	Part No.	Description	Remark	No.	Part No.	Description	Remark
51	*2-181-648-01	RAIL, CAMERA MOUNT GUIDE		78	2-181-680-01	CUSHION (A), RUBBER, SCREW	
52	2-181-641-01	HOLDER, 8P CONNECTOR		79	2-181-685-01	CASE, CONNECTOR RETAINER	
53	*2-181-679-01	WEIGHT (D)		80	2-181-674-01	RETAINER, CONNECTOR	
54	*A-6767-857-A	REMOTE CONTROL BLOCK ASSY	55,56	81	*2-181-651-01	CAMERA MOUNT	
55	*2-181-678-01	CASE, REMOTE CONTROL		82	*2-181-634-02	PLATE, GUIDE, RAIL	
56	*2-181-673-01	LID, REMOTE CONTROL CASE		83	2-391-512-00	RING (5), RETAINING, E TYPE	
57	2-181-647-01	LEVER, REC		84	2-181-601-01	WASHER, BASE FIXED SCREW	
58	2-115-924-41	RING, O		85	2-181-612-01	SCREW, BASE FIXED	
59	2-181-633-01	BEARING (B)		86	2-181-629-01	SHAFT, AUTO LOCK RELEASE LEVER	
60	2-181-646-01	LEVER, POWER SWITCH		87	2-181-611-01	SPRING (C)	
61	2-181-670-31	RING, O		88	2-181-636-01	LEVER, RELEASE, AUTO LOCK	
62	2-181-632-01	BEARING (A)		89	X-2181-609-1	LEVER ASSY, AUTO LOCK	
63	2-181-609-01	SPRING (A)		90	2-181-623-01	STOPPER (C)	
64	X-2181-603-1	FUNCTIONING PLATE ASSY, POWER SWITCH		91	7-682-247-09	SCREW +K 3X6	
65	7-682-147-15	SCREW +P 3X6		92	*2-181-681-01	GUIDE, CAMERA MOUNT	
66	7-621-255-85	SCREW +P 2X14		93	2-181-671-01	SPRING	
67	*2-181-643-01	COVER, POWER SWITCH		94	2-181-677-01	LEVER, LOCK	
68	7-621-255-32	SCREW +P 2X5		95	2-181-676-01	PLATE, LOCK	
69	X-2181-604-1	BASE ASSY, REC SWITCH		96	2-181-672-01	SHAFT, LOCK LEVER	
70	2-181-627-01	PLATE, FUNCTION, REC SWITCH		97	2-181-605-01	SCREW (M3.5X8)	
71	2-181-610-01	SPRING (B)		98	X-2181-602-1	BASE, ASSY POWER SWITCH	
72	2-181-608-01	SCREW, FUNCTION PLATE FITTING		99	2-115-932-01	RING (6), E	
73	7-621-255-55	SCREW +P 2X8		100	2-181-689-01	RUBBER, CAMERA MOUNT	
74	*2-181-644-01	COVER, REC SWITCH		101	2-181-688-01	PLATE, INDICAT	
75	7-682-147-09	SCREW +P 3X6		001	1-553-636-00	SWITCH, MICRO	
76	1-520-502-11	DISPLAY ASSY, REC		002	1-553-636-00	SWITCH, MICRO	
77	7-682-249-09	SCREW +K 3X10		003	1-553-636-00	SWITCH, MICRO	

SECTION 4 ELECTRICAL PARTS LIST

MPK-F40/F340

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- RESISTORS
All resistors are in ohms
METAL: Metal-film resistor
METAL OXIDE: Metal Oxide-film resistor
F: nonflammable
- Items marked "★" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- SEMICONDUCTORS
In each case, U: μ , for example:
UA.....: μ A....., UPA.....: μ PA.....,
UPB.....: μ PB....., UPC.....: μ PC.....,
UPD.....: μ PD.....
- CAPACITORS
MF: μ F, PF: μ μ F
- COILS
MMH: mH, UH: μ H

Ref.No	Part No.	Description	Remark	Ref.No	Part No.	Description	Remark
		REMOCON BOARD *****		Q002	8-729-178-54	TRANSISTOR 2SC2785-F	
	1-574-255-11	CABLE, REMOTE CONTROL (A) (CCD-V90/V9)		Q003	8-729-900-89	TRANSISTOR DTC144ES	
	1-574-256-11	CABLE, REMOTE CONTROL (B) (CCD-F340/F40/SP5/SP7)		Q004	8-729-900-89	TRANSISTOR DTC144ES	
	2-181-680-01	CUSHION (A), RUBBER, SCREW (CCD-F340/F40/SP5/SP7)		Q005	8-729-900-65	TRANSISTOR DTA144ES	
	2-181-680-11	CUSHION (B), RUBBER, SCREW (CCD-V90/V9)		Q006	8-729-900-89	TRANSISTOR DTC144ES	
		<u>CAPACITOR</u>		Q007	8-729-204-83	TRANSISTOR 2SA1048-GR	
C001	1-124-234-00	CAP, ELECT 22MF		Q008	8-729-178-54	TRANSISTOR 2SC2785-F	
C002	1-102-129-00	CAP, CERAMIC 0.01MF B				<u>RESISTOR</u>	
C003	1-126-094-11	CAP, ELECT 4.7MF		R001	1-249-409-11	RES, CARBON (SMALL) 220	
C004	1-102-110-00	CAP, CERAMIC 220PF B		R002	1-249-429-11	RES, CARBON (SMALL) 10K	
C005	1-102-110-00	CAP, CERAMIC 220PF B		R003	1-249-437-11	RES, CARBON (SMALL) 47K	
C006	1-124-255-00	CAP, ELECT 1.0MF		R004	1-249-441-11	RES, CARBON (SMALL) 100K	
C007	1-124-234-00	CAP, ELECT 22MF		R005	1-249-437-11	RES, CARBON (SMALL) 47K	
C008	1-124-255-00	CAP, ELECT 1.0MF		R006	1-249-429-11	RES, CARBON (SMALL) 10K	
C009	1-126-157-11	CAP, ELECT 10MF		R007	1-249-441-11	RES, CARBON (SMALL) 100K	
C010	1-126-157-11	CAP, ELECT 10MF		R008	1-249-441-11	RES, CARBON (SMALL) 100K	
		<u>PLUG</u>		R009	1-249-429-11	RES, CARBON (SMALL) 10K	
CNPO01	1-556-757-21	CORD (WITH PLUG)		R010	1-249-429-11	RES, CARBON (SMALL) 10K	
		<u>DIODE</u>		R011	1-249-429-11	RES, CARBON (SMALL) 10K	
D001	8-719-109-84	DIODE RD5.1ESB1		R012	1-249-429-11	RES, CARBON (SMALL) 10K	
D002	8-719-911-19	DIODE 1SS119		R013	1-249-429-11	RES, CARBON (SMALL) 10K	
D003	8-719-911-19	DIODE 1SS119		R014	1-249-429-11	RES, CARBON (SMALL) 10K	
D004	8-719-911-19	DIODE 1SS119		R015	1-247-903-00	RES, CARBON (SMALL) 1.0M	
D005	8-719-911-19	DIODE 1SS119		R016	1-247-883-00	RES, CARBON (SMALL) 150K	
D006	8-719-911-19	DIODE 1SS119		R017	1-247-883-00	RES, CARBON (SMALL) 150K	
D007	8-719-911-19	DIODE 1SS119		R018	1-249-441-11	RES, CARBON (SMALL) 100K	
D008	8-719-911-19	DIODE 1SS119		R019	1-249-413-11	RES, CARBON (SMALL) 470	
D009	8-719-911-19	DIODE 1SS119		R020	1-249-441-11	RES, CARBON (SMALL) 100K	
D010	8-719-911-19	DIODE 1SS119		R021	1-247-891-00	RES, CARBON (SMALL) 330K	
D011	8-719-911-19	DIODE 1SS119		R022	1-247-891-00	RES, CARBON (SMALL) 330K	
D012	8-719-911-19	DIODE 1SS119		R023	1-249-441-11	RES, CARBON (SMALL) 100K	
D013	8-719-911-19	DIODE 1SS119		R024	1-249-441-11	RES, CARBON (SMALL) 100K	
D014	8-719-911-19	DIODE 1SS119		R025	1-247-840-00	RES, CARBON (SMALL) 2.4K	
D015	8-719-812-31	TLR123				<u>SWITCH</u>	
		<u>IC</u>		S001	1-553-636-00	SWITCH, MICRO	
IC001	8-759-142-56	IC UPD7503G-A71-12		S002	1-553-636-00	SWITCH, MICRO	
IC002	8-759-240-69	IC TC4069UBP		S003	1-553-636-00	SWITCH, MICRO	
IC003	8-759-240-24	IC TC4024BP				<u>CRYSTAL</u>	
IC004	8-759-245-38	IC TC4538BP		X001	1-527-532-00	OSCILLATOR, CERAMIC	
IC005	8-759-913-41	IC S-8054ALB				*****	
		<u>MICROPHONE</u>					
MIC001	1-542-114-11	MICROPHONE, UNDERWATER					
		<u>TRANSISTOR</u>					
Q001	8-729-900-89	TRANSISTOR DTC144ES					

MPK-F40/F340

ACCESSORIES AND PACKING MATERIALS *****

<u>Part No.</u>	<u>Description</u>	<u>Remark</u>
X-2181-605-1	FINDER ASSY	
X-2181-606-1	PEDESTAL (F340/F40) ASSY	
X-2181-607-1	PEDESTAL (SP5/SP7) ASSY	
X-2181-608-1	PEDESTAL (V90/V9) ASSY	
2-115-921-01	GREASE	
2-181-617-01	PACKING, WATERPROOF	
*2-181-656-01	INDIVIDUAL CARTON (AEP,UK,E,Australian Model)	
*2-181-656-11	INDIVIDUAL CARTON (US,Canadian Model)	
*2-181-657-01	CUSHION (UPPER)	
*2-181-658-01	CUSHION (LOWER)	
*2-181-669-01	CONVERSION LENS	
2-181-670-01	RING, O	
2-181-680-11	CUSHION (B), RUBBER, SCREW (CCD-V9,V90E)	
3-786-438-11	MANUAL, INSTRUCTION (ENGLISH/FRENCH/SPANISH)	
3-786-438-51	MANUAL, INSTRUCTION (GERMAN/DUTCH/ITALY)	
3-786-438-61	MANUAL, INSTRUCTION (ARABIC)	

HARDWARE LIST

SCREW

7-621-255-40	SCREW +P 2X6
7-621-255-55	SCREW +P 2X8
7-621-255-85	SCREW +P 2X14
7-682-147-09	SCREW +P 3X6
7-682-147-15	SCREW +P 3X6
7-682-249-09	SCREW +K 3X10
